





FIXING GUIDE

THE EDGE type 3 may be suspended from timber or steel framing.

Frame up for the ceiling.


Screw-fix the pelmet to each ceiling framing member at 450mm ctrs (min.)

Run cable to pelmet in preparation for lamp installation.

Fix the plasterboard ceiling lining level with the pelmet cast. Bond together with cornice cement. Tape and set in accordance with plasterboard manufacturer's instructions for joining two sheets of plasterboard.

A licensed electrician is to install the ballasts and lamps ensuring that lamps are staggered so as to avoid dark spots.

Pelmet is to be primed for painting as for standard procedure for painting fibrous plaster surfaces.

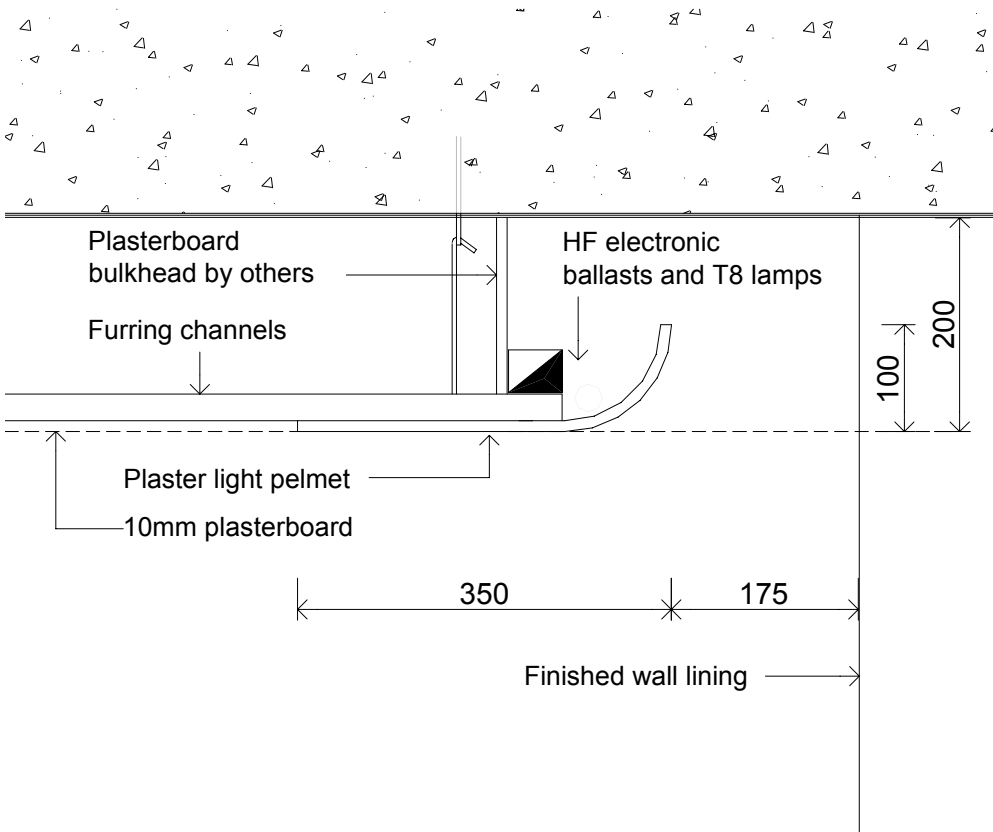

The EDGE type 3 is a ceiling perimeter-mounted luminaire specifically designed to be flush-joined with a standard 10mm plasterboard ceiling. It can be used where vertical space is limited and as a budget solution to ceiling perimeter illumination.

E L E C T R I C A L

fittings high frequency electronic ballasts

lamps triphosphor T8 fluorescent & T5 Fluorescent